

# AUDIX<sup>®</sup> VOICE MESSAGING

# QUICK REFERENCE

AUDIX  
System \_\_\_\_\_ Your \_\_\_\_\_ System  
Number \_\_\_\_\_ Ext. \_\_\_\_\_ Admin. \_\_\_\_\_

585-305-714, Issue 1, 11/93

---

# YOUR VOICE MAIL SYSTEM

**LOG IN**


- Dial your AUDIX system number.
- Enter # (from your ext.) or extension #.
- Enter password #.
- Get your initial password from your system administrator.

**ACTIVITY MENU**

|                                  |          |
|----------------------------------|----------|
| Send Messages                    | 1        |
| Get Messages                     | ABC<br>2 |
| Administer Greetings             | DEF<br>3 |
| Check Outgoing Messages          | GHI<br>4 |
| Change Password/Administer Lists | JKL<br>5 |
| Scan Messages Quickly            | PRS<br>7 |

**BASIC COMMANDS**

|   |       |
|---|-------|
| Help  | * H   |
| Return to Activity Menu                         | * R   |
| Delete  | * D   |
| Undelete  | * * U |
| Wait  | * W   |
| Transfer out of system                          | * T   |
| Look up name/ext. in Directory                  | * * N |
| Exit system                                     | * * X |
| Hold message in category                        | * * H |
| <b>Use while addressing:</b>                    |       |
| Alternate addressing (switch between name/ext.) | * A   |
| Use list of addresses                           | * L   |

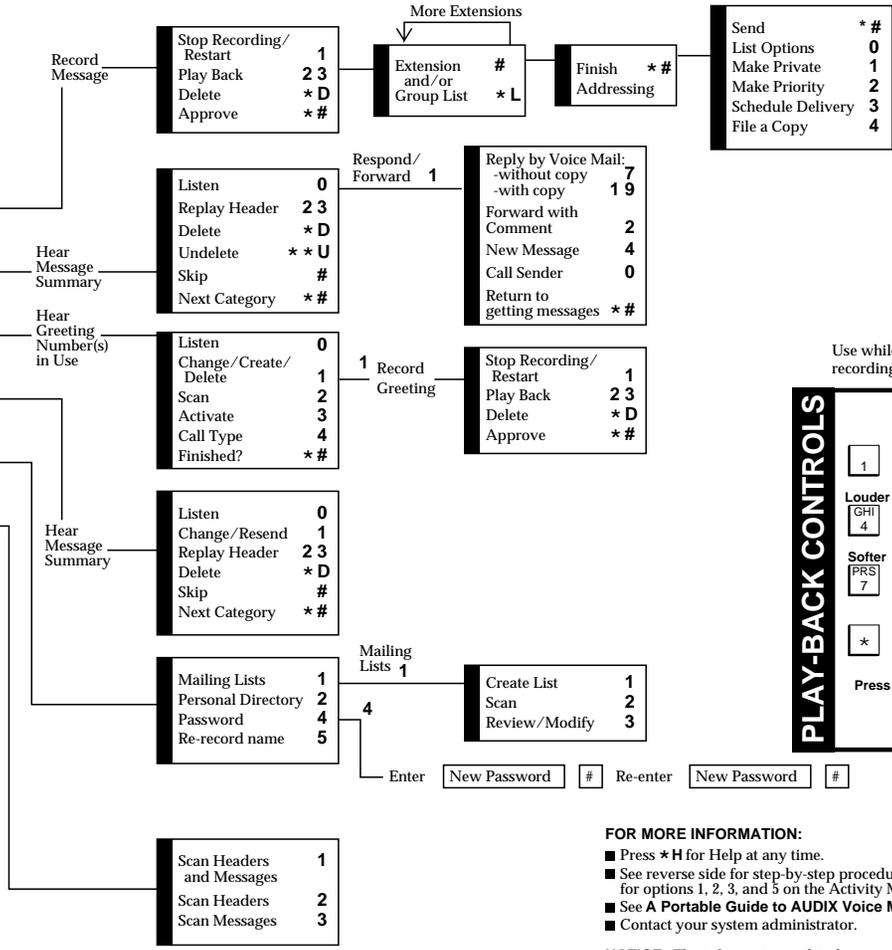

Use while listening to or recording messages.

**PLAY-BACK CONTROLS**

|                    |                     |                         |
|--------------------|---------------------|-------------------------|
| 1                  | ABC<br>2            | Play/Pause<br>DEF<br>3  |
| Louder<br>GHI<br>4 | Back Up<br>JKL<br>5 | Advance<br>MNO<br>6     |
| Softer<br>PRS<br>7 | Slower<br>TUV<br>8  | Faster<br>WXY<br>9      |
| *                  | 0                   | Listen/Replay Skip<br># |

Press 3 to pause and 3 again to continue.  
Q=7 Z=9

**FOR MORE INFORMATION:**

- Press \*H for Help at any time.
- See reverse side for step-by-step procedures for options 1, 2, 3, and 5 on the Activity Menu.
- See **A Portable Guide to AUDIX Voice Messaging, 585-305-715.**
- Contact your system administrator.

**NOTICE:** The information in this document is subject to change without notice. AT&T assumes no responsibility for any errors that may appear in this document.

# YOUR VOICE MAIL SYSTEM



## RECORD MESSAGE

1. Press 1.
2. Speak message.  
**Edit -**
  - Press 1 to stop/pause.  
THEN  
Press 1 to continue.
  - Press 2 3 to play back.
  - Press \*D to delete and re-record.  
(Begin at step 1.)
3. When finished, press \* # to approve.

## ADDRESS / SEND MESSAGE

4. Enter recipient's extension and #.
5. Listen to address.
6. Repeat steps for more addresses.
7. Press \*\* # to send NOW.  
OR  
Press \* # to approve address list and access Options Menu.  
**For Special Options -**
  - Press 0 to hear all available Options Menu selections.
    - Press 1 to make message private.
    - Press 2 to make message priority.
    - Press 3 to schedule delivery.
    - Press 4 to file a copy.
8. Press \* # to send.



## LISTEN TO MESSAGE

1. Press 2.
2. Listen to message header.
3. Press 0 and listen to message.  
**Options -**
  - Respond, go to step 4.
  - Press 2 3 to play back summary.
  - Press \*D to delete and skip to next summary. If, immediately after deleting a message, you need to restore it, press \*\*U to undelete the message.
  - Press # to save and skip to next summary.

## RESPOND TO MESSAGE

4. Choose one:
  - Call sender directly, press 1 0.
  - *Reply by voice mail:*
    - Press 1 7 and speak message (to send reply only).  
OR  
Press 1 1 9 and speak message (to attach original).
    - Press \*\* # to approve and send NOW.  
OR  
Press \* # to approve and send with options.
  - Forward with comment, press 1 2.  
Go to RECORD MESSAGE above.



## RECORD GREETING

1. Press 3.
2. Listen to greeting number in use.
3. Press 1 to create/change greeting.
4. Indicate greeting number you will record (1-9).
5. Speak greeting.  
**Edit -**
  - Press 1 to stop/pause.  
THEN  
Press 1 to continue.
  - Press 2 3 to play back.
  - Press \*D to delete and re-record.  
(Begin at step 5.)
6. When finished, press \* # to approve.

## USE GREETING

7. Press 1 to use greeting for all calls.  
OR  
Press \* # to leave greeting inactive.  
**NOTE:** Depending on your system setup, you may have the ability to create **multiple personal greetings** (up to 9) and to activate them for different call types.  
To use the **Multiple Personal Greetings** feature, listen to the system prompts or see **A Portable Guide to AUDIX Voice Messaging, 585-305-715.**



### CHANGE PASSWORD

1. Press 5 4.
2. Enter new password (up to 15 digits, 0-9) and press #.
3. Re-enter new password and press #.

### TIPS

- To alternate between extension and name addressing, press \*A.
- To approve and send a message NOW, press \*\* #.
- To bypass greetings, use the *dial-through* feature by pressing 1 as soon as the system answers and speak your message.

#### FOR MORE INFORMATION

- Press \*H for Help at any time.
- See reverse side for complete voice mail system flow chart.
- See *A Portable Guide to AUDIX Voice Messaging*, 585-305-715.
- Contact your system administrator at \_\_\_\_\_

AUDIX  
System \_\_\_\_\_ Your  
Number \_\_\_\_\_ Ext. \_\_\_\_\_

Use while listening to or recording  
messages.

### LOG IN

1. Dial your voice mail number.
2. Enter # or extension and #.
3. Enter password and #.

Get your initial password from  
your system administrator.

### PLAY-BACK CONTROLS

|                    |                     |                        |
|--------------------|---------------------|------------------------|
| 1                  | Rewind<br>ABC<br>2  | Play/Pause<br>DEF<br>3 |
| Louder<br>GHI<br>4 | Back Up<br>JKL<br>5 | Advance<br>MNO<br>6    |
| Softer<br>PRS<br>7 | Slower<br>TUV<br>8  | Faster<br>WXY<br>9     |
| *                  | Listen/Replay<br>0  | Skip<br>#              |

Press 3 to pause and 3 again  
to continue.  
Q=7 Z=9

### ACTIVITY MENU

|                                |                                |                                     |
|--------------------------------|--------------------------------|-------------------------------------|
| Record<br>Messages<br>1        | Get<br>Messages<br>ABC<br>2    | Administer<br>Greetings<br>DEF<br>3 |
| Review<br>Messages<br>GHI<br>4 | Password/<br>Lists<br>JKL<br>5 | MNO<br>6                            |
| Scan<br>Messages<br>PRS<br>7   | TUV<br>8                       | WXY<br>9                            |
| *                              | 0                              | #                                   |

\*\*R Re-log in  
Q=7 Z=9

### BASIC COMMANDS

|  |     |
|--|-----|
| Help   | *H  |
| Restart at Activity Menu                           | *R  |
| Wait   | *W  |
| Transfer out of system                             | *T  |
| Look up name/ext. in<br>Directory                  | **N |
| Exit system  | **X |
| Transfer call to operator                          | *0  |
| Delete   | *D  |
| Undelete   | **U |
| Hold message in category                           | **H |
| Alternate addressing<br>(switch between name/ext.) | *A  |
| Use group list during<br>addressing                | *L  |
| Hear Options Menu<br>(after addressing)            | 0   |